

TFU16-3/TFS26-3 系列说明书

USER MANUAL

一、操作说明 OPERATION


1. 送料长度调节 The length setting of tape feeding

- 按  增加送料长度
- 按  增加送料长度
- Pressing  to increase the tape feeding length
- Pressing  to shorten the tape feeding length


2. 送料电机转速调节 The speed setting of tape feeding

- 同时按  和  ，嘀一声后进入电机转速调整
- 支持 9 挡调速 A1(慢)~ A9(快)，可通过   调整
- 设置完成后，同时按下  和  退出
- Pressing  and  at the same time to enter motor speed setting page
- Provide 9 levels(A1 ~ A9, from slow to fast) for user to chose
- Pressing  and  at the same time to exit motor speed setting

二、安装示意图 INSTALLATION

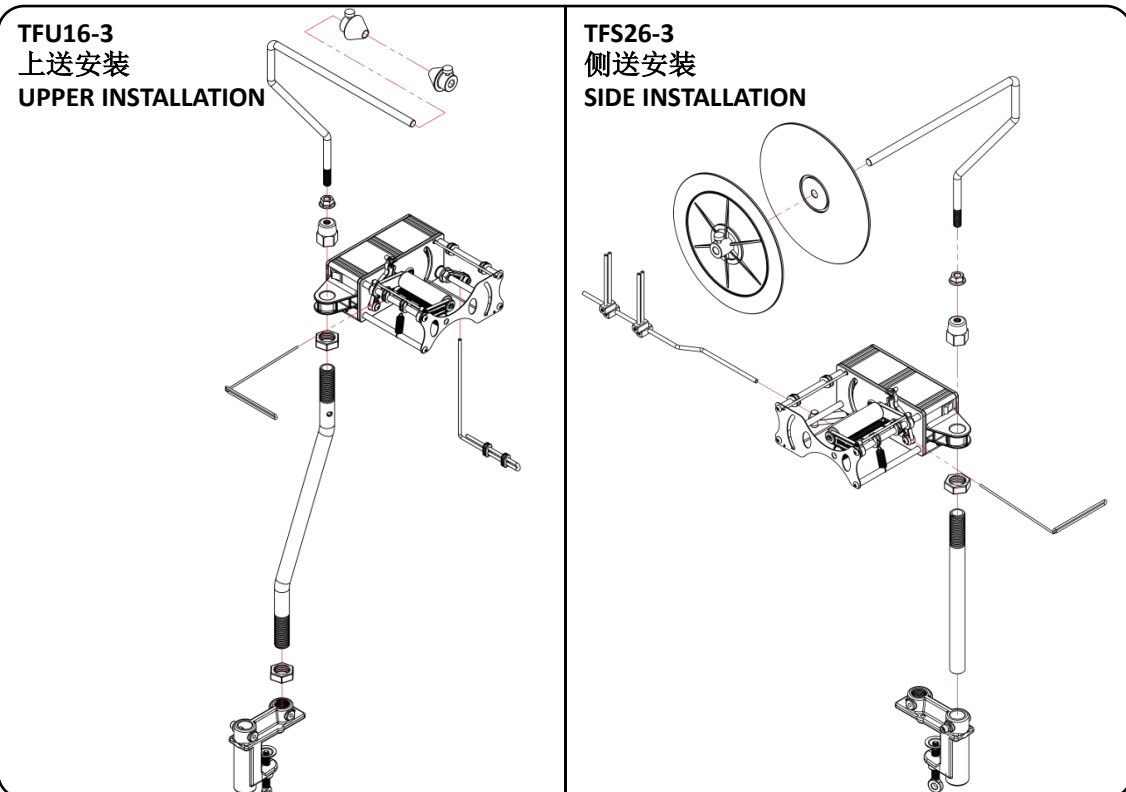

三、TFU16-3 零件图 PARTS LIST

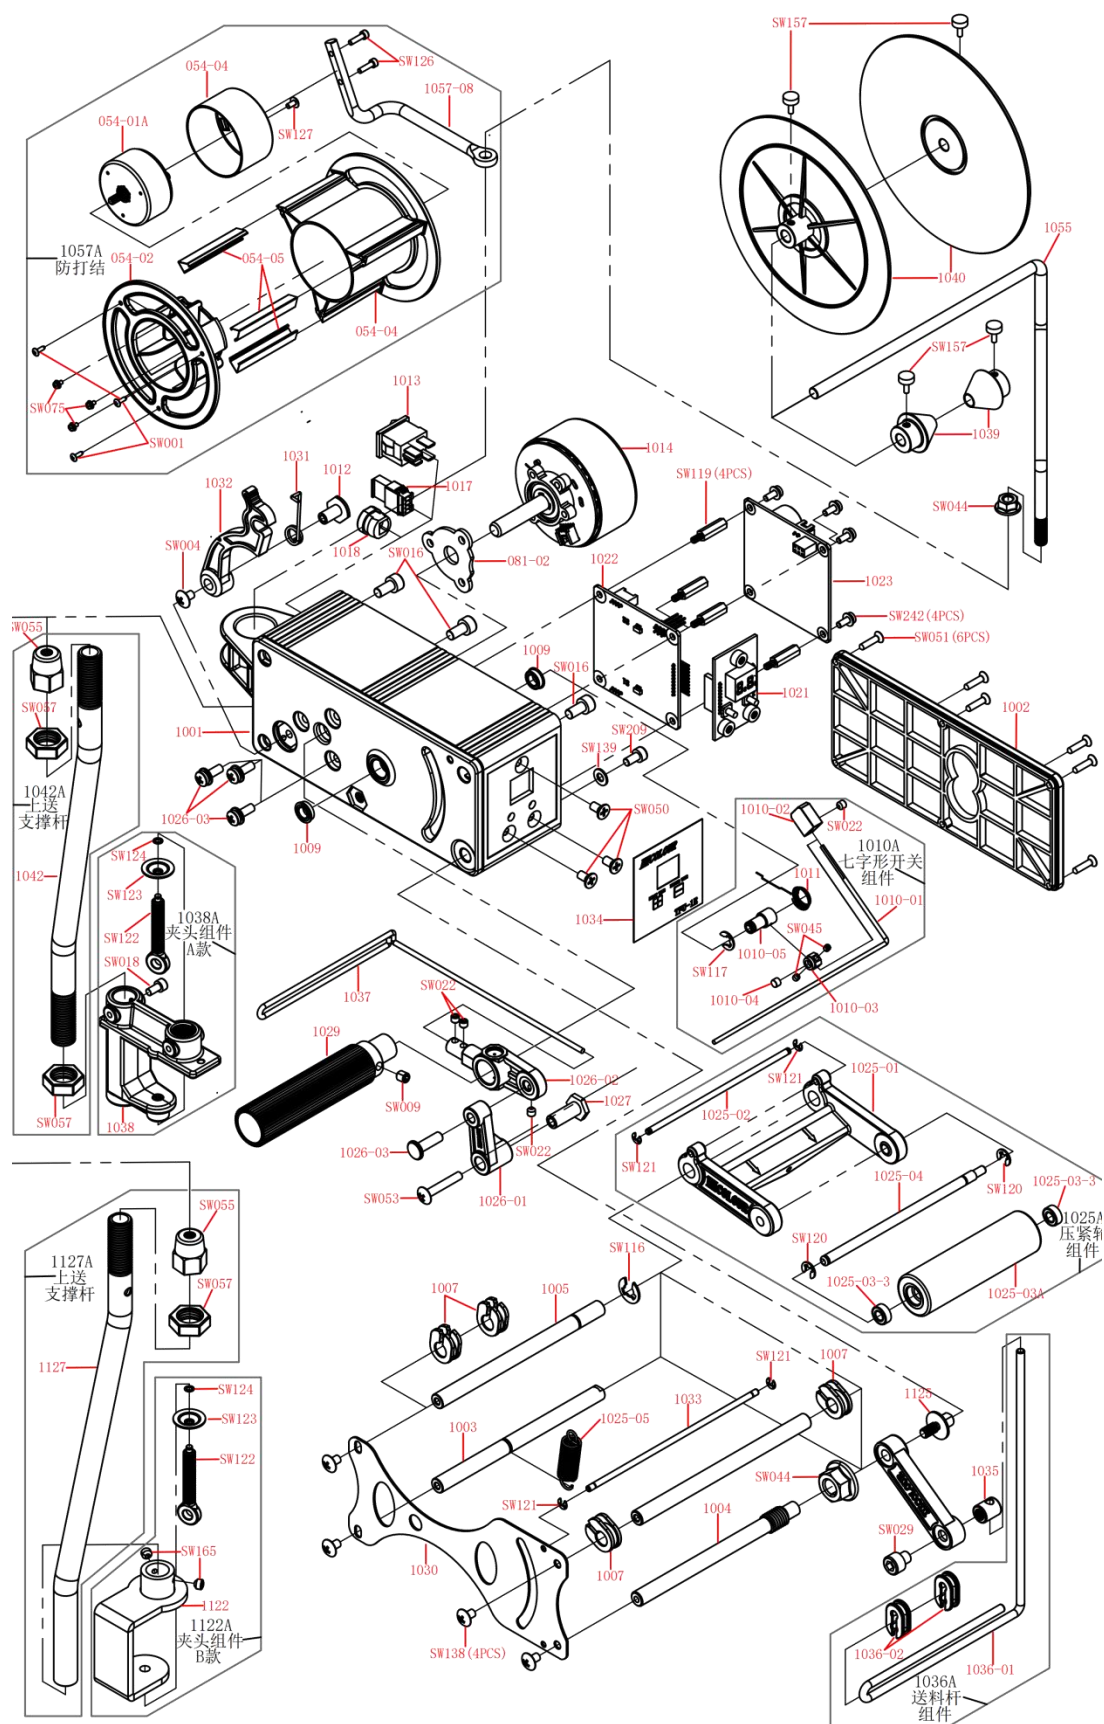

四、TFS26-3 零件图 PARTS LIST

